




ONE

ONE CHANNEL

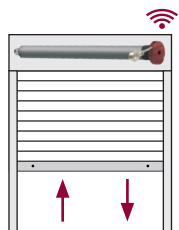

Position



Up

Stop

Down



Shutter number

Kanaal indicator op scherm.

Indicateur de canal sur l'écran.

Channel indicator displayed.




Location

Weergave locatie rolluik op scherm.

Location du volet indiquée sur l'écran.

Shutter location displayed.

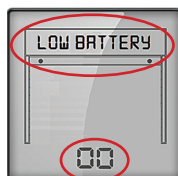

Low Battery

« Lage batterij » indicator.

Indicateur de niveau « faible batterie ».

« Low battery » indicator.

Location settings

1

Download and instal zaffer soft from www.zaffer.be
Windows based PC. (Windows XP, Windows Vista, Windows 7)



2

A. Please connect your device



B. Enter shutter location



C. To finish

Click send to device button

Send to device

CE Declaration of Conformity

ZAFFER B.v.b.a - Weveldlaan 41 B-1930 Zaventem Belgium, declares that the product.

ONE, meet the essential requirements of the R&TTE directive 1999/5/EC for the intended use of the devices.


Note: A copy of the original declaration of conformity for each product can be requested from ZAFFER Bvba.




Power input : 3V dc with 2 lithuim batteries
Frequency : 433 MHz.
Working temperature : -20°C + 55°C
Radiated power : Estimated at approx. 1mW
IP : 40

Zaffer B.v.b.a reserves the right to modify
its products without any notice.

Low battery indicator

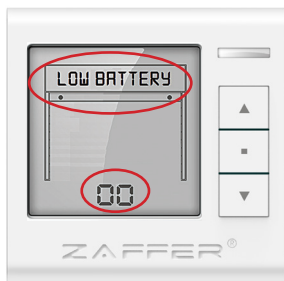


Change battery

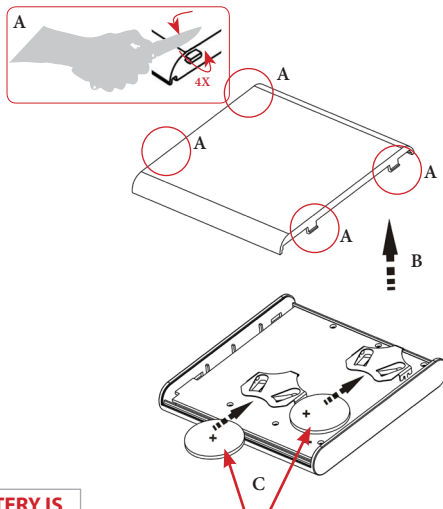

Battery: 2x **CR 2430**

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Montage

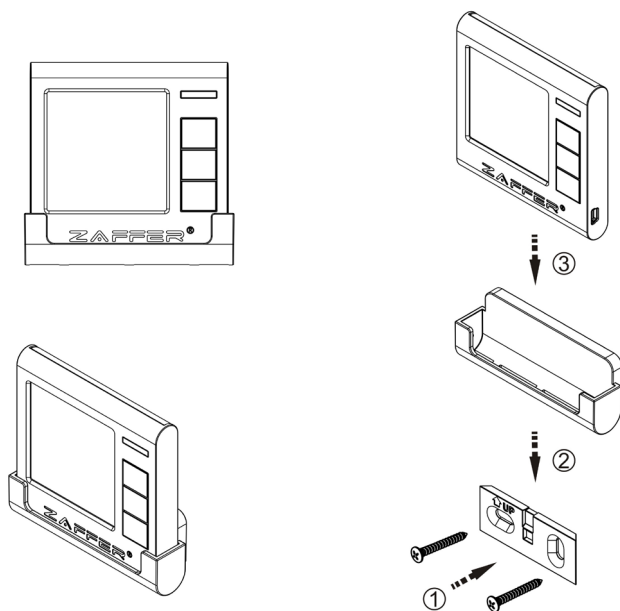

installer manual




ONE

ONE CHANNEL


Pairing with the zaffer motor

1. Click

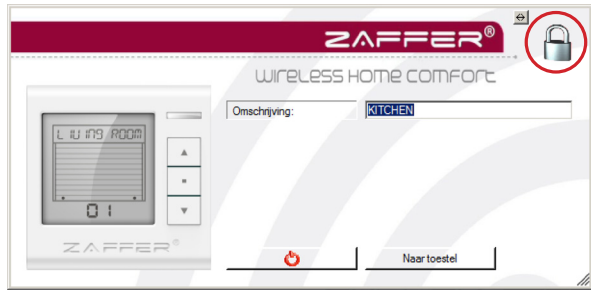


Paswoord vereist voor inbreng of aanpassing motornummers (alleen voor professionelen).
Mot de passe requis pour encoder ou adapter des numéros de moteur (seulement pour professionnels).
Password required for input and modification motor numbers (only for professionals).

2. Enter Password

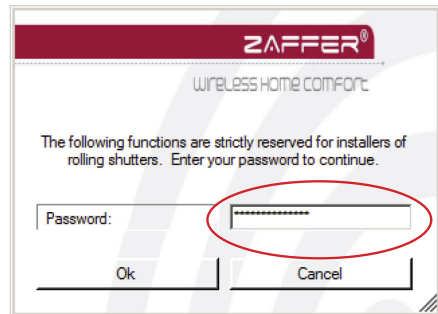


3. Motor number

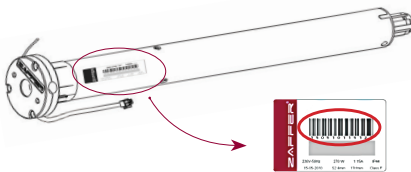

Enter shutter location	→	Omschrijving:	KITCHEN
Enter motor number	→	Motomummer:	9974685234993
Enter shutter number	→	Nummer:	03


4. To finish

 Click send to device button





Motor programming instructions with ONE

 

  
1.



Changing **direction**

 



8x →






Motor click - clack


2.




Settings **Step by step** Function




6x →



1x Down




Keep Pushing till motor makes klik-clak




Motor click - clack

3.


A




Deleting **UP** limit




4x →



1x UP




Keep Pushing till motor makes klik-clak




Motor click - clack


B




Deleting **Down** Limit




4x →



1x Down




Keep Pushing till motor makes klik-clak




Motor click - clack

4.


A

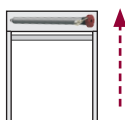


UP Limit Settings




2x →



1x UP




Keep Pushing till motor makes klik-clak




Motor click - clack


B




Down Limit Settings




2x →



1x Down




Keep Pushing till motor makes klik-clak

 


Motor click - clack


5.




Deleting **Step by step** Function




6x →




1x UP



Keep Pushing till motor makes klik-clak



Motor click - clack

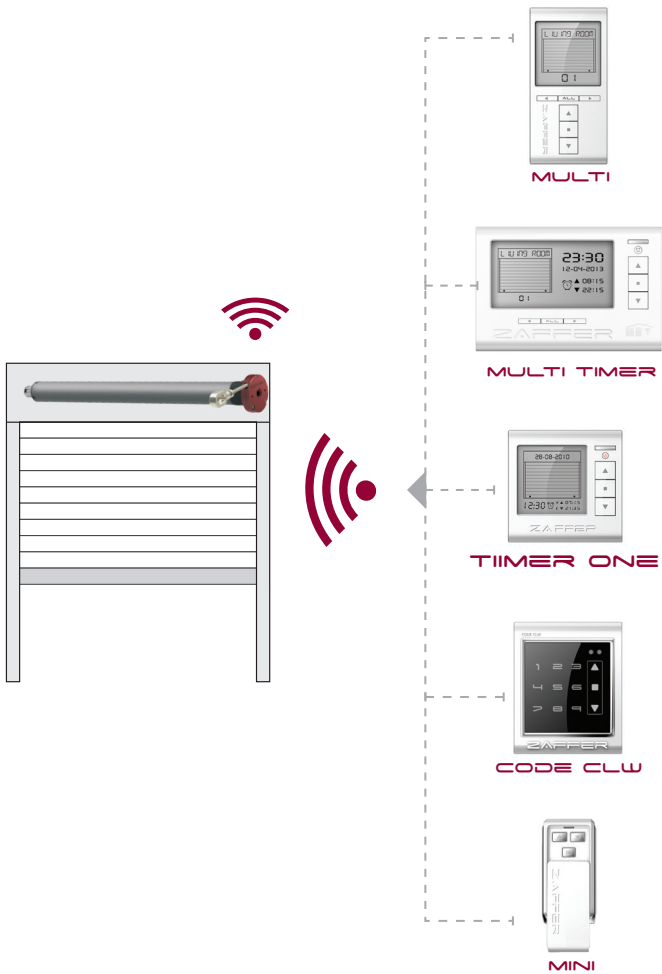

www.zaffer.be