 

 

 
 






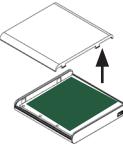

 

 





 



 

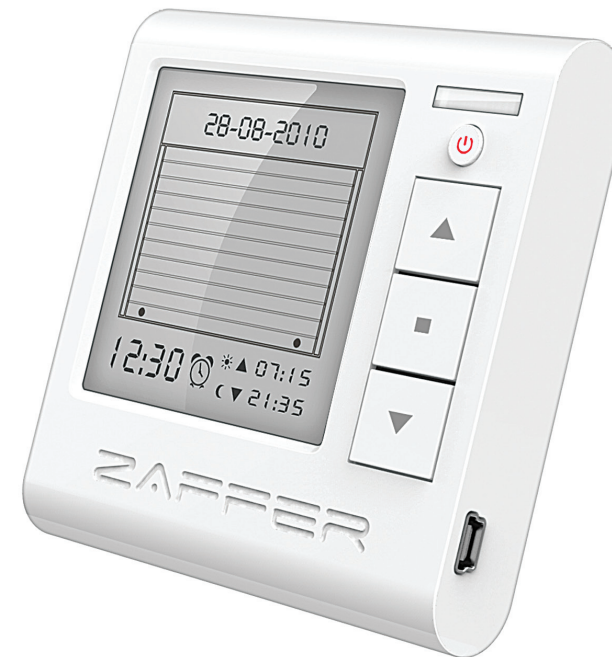


1.		Changing direction		8x →		Motor click - clak	
2.		Settings Step by step Function		6x →		1x Down Keep Pushing till motor makes klik-clak	
3.	A 	Deleting UP limit		4x →		1x UP Keep Pushing till motor makes klik-clak	
	B 	Deleting Down Limit		4x →		1x Down Keep Pushing till motor makes klik-clak	
4.	A 	UP Limit Settings		2x →		1x UP Keep Pushing till motor makes klik-clak	
	B 	Down Limit Settings		2x →		1x Down Keep Pushing till motor makes klik-clak	
5.		Deleting Step by step Function		6x →		1x UP Keep Pushing till motor makes klik-clak	

installer manual



TIMER ONE
ONE CHANNEL

A Install zaffer soft,
Download from - www.zaffer.be




1. Click




Paswoord vereist voor inbreng of aanpassing motornummers (alleen voor professionelen).
Mot de passe requis pour encoder ou adapter des numéros de moteur (seulement pour professionnels).
Password required for input and modification motor numbers (only for professionals).

2. Enter Password

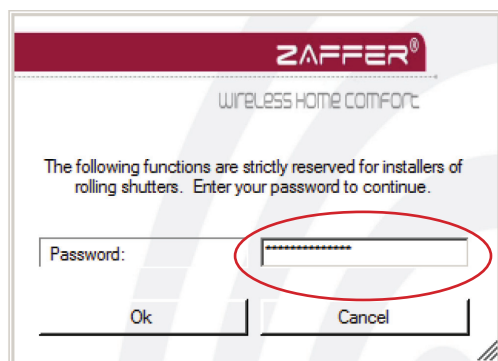

3.

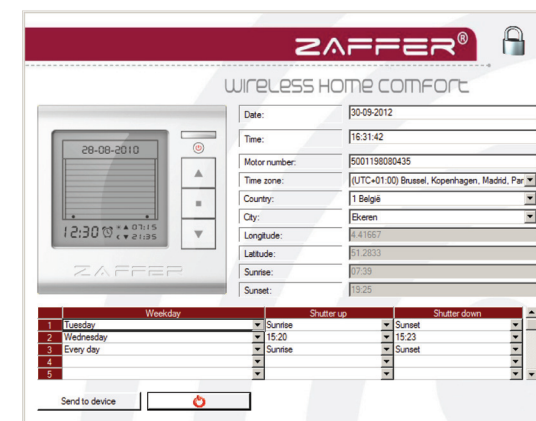


4. Date - Time

Updated from computer automatically



 5. Motor number




6. Time zone



7. Country



 8. City




9. Week day

select from list



10. Up time

▲ type time HH-MM or select from list

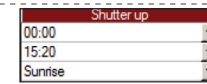


11. Down time

▼ type time HH-MM or sselect from list



12. Clear :

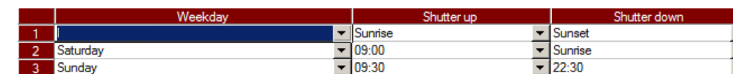

Select empty line from list

13. To program timer one

Click send to device button

