






TIMER ONE

ONE CHANNEL
WITH TIME SETTING



One channel remote controller with timer option

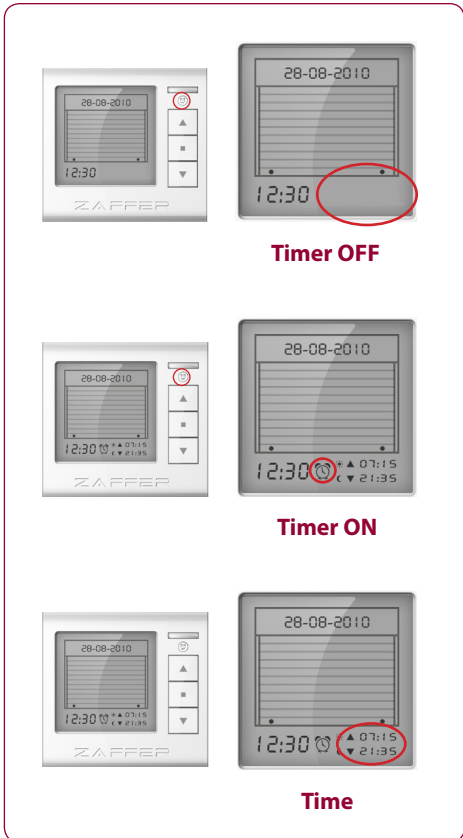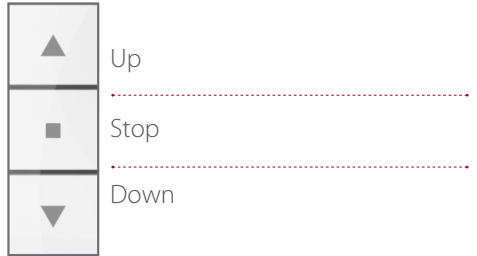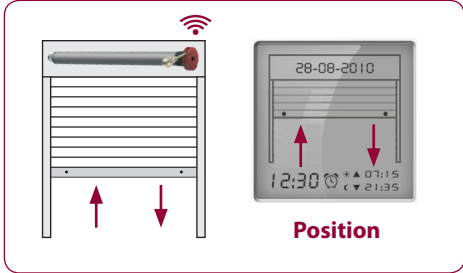

Time settings

1


Download and instal zaffer soft from www.zaffer.be
Windows based PC. (Windows XP, Windows Vista, Windows 7)



2



Please connect your device

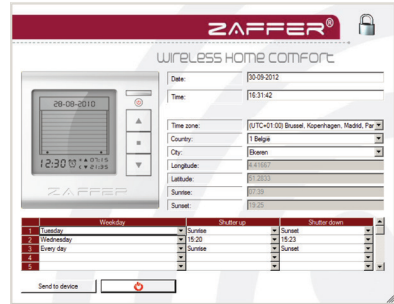

A. Date - Time

Updated from computer automatically

Date:	23-08-2012
Time:	16:27:55

B. Time zone (select from list)

Time zone:	(UTC+01:00) Brussel, Kopenhagen, Ma
------------	-------------------------------------

C. Country (select from list)

Country:	1 België
----------	----------

D. City (select from list)

City:	Brussels (Bruxelles)
-------	----------------------

E. Week day select from list

	Weekday
1	Monday-Friday
2	Saturday
3	Sunday

F. Up time ▲ type time HH-MM or select from list

Shutter up
00:00
15:20
Sunrise

G. Down time ▼ type time HH-MM or sselect from list

Shutter down
00:00
15:23
Sunset

H. Clear :

	Weekday	Shutter up	Shutter down
1		Sunrise	Sunset
2	Saturday	09:00	Sunrise
3	Sunday	09:30	22:30


To Clear select empty line from list

I. To finish

Click send to device button

Send to device


Low battery indicator

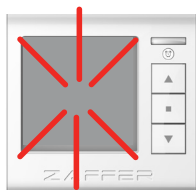


When display flashes
change CR2430 Battery

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Change battery

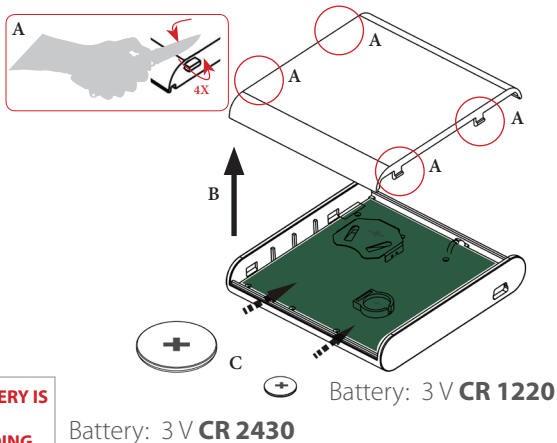

Montage

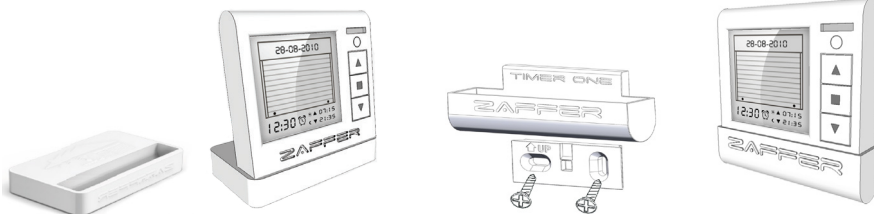

CE Declaration of Conformity

ZAFFER B.v.b.a - Weiveldlaan 41 B-1930 Zaventem Belgium, declares that the product.

TIMER ONE, meet the essential requirements of the R&TTE directive 1999/5/EC for the intended use of the devices.

Note: A copy of the original declaration of conformity for each product can be requested from ZAFFER Bvba.



Power input : 3V dc with 1x lithium batteries CR 2430
3V dc with 1x lithium batteries CR 1220
Frequency : 433 MHz.
Working temperature : -20°C + 55°C
Radiated power : Estimated at approx. 1mW
IP : 40

Zaffer B.v.b.a reserves the right to modify
its products without any notice.

installer manual




TIMER ONE

ONE CHANNEL
WITH TIME SETTING


Pairing with the zaffer motor

1. Click

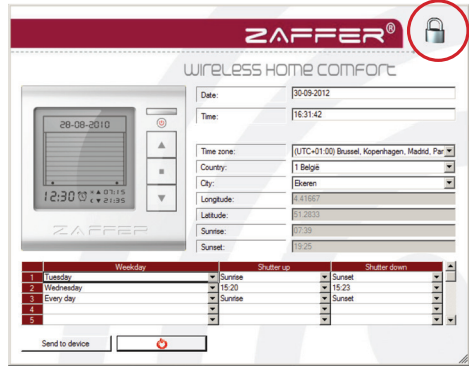


Paswoord vereist voor inbreng of aanpassing motornummers (alleen voor professionelen).
Mot de passe requis pour encoder ou adapter des numéros de moteur (seulement pour professionnels).
Password required for input and modification motor numbers (only for professionals).


2. Enter Password

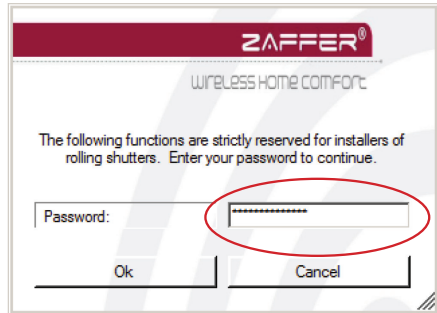

3. Motor number

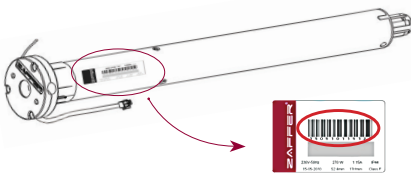

Enter motor number

 


4. To finish

Click send to device button



Send to device

Motor programming instructions with **TIMER ONE**

 
1.



Changing **direction**

  



8x →




Motor click - clack

 
2.



Settings **Step by step** Function




6x →



1x Down


Keep Pushing till motor makes klik-clak




Motor click - clack

3.


A



Deleting **UP** limit




4x →




1x UP

Keep Pushing till motor makes klik-clak




Motor click - clack


B



Deleting **Down** Limit




4x →



1x Down


Keep Pushing till motor makes klik-clak




Motor click - clack

4.


A

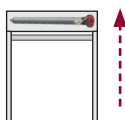

UP Limit Settings




2x →




1x UP

Keep Pushing till motor makes klik-clak




Motor click - clack


B



Down Limit Settings




2x →




1x Down

Keep Pushing till motor makes klik-clak

 


Motor click - clack


5.



Deleting **Step by step** Function




6x →





1x UP

Keep Pushing till motor makes klik-clak



Motor click - clack

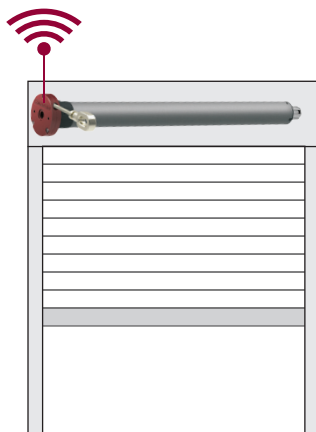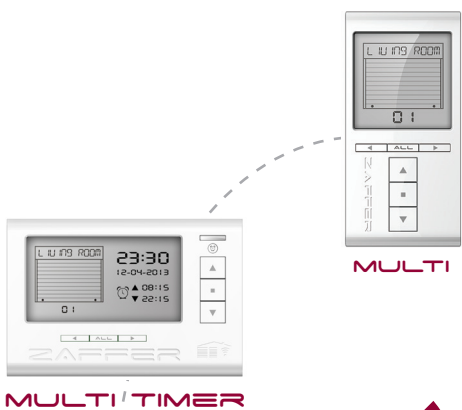

www.zaffer.be